

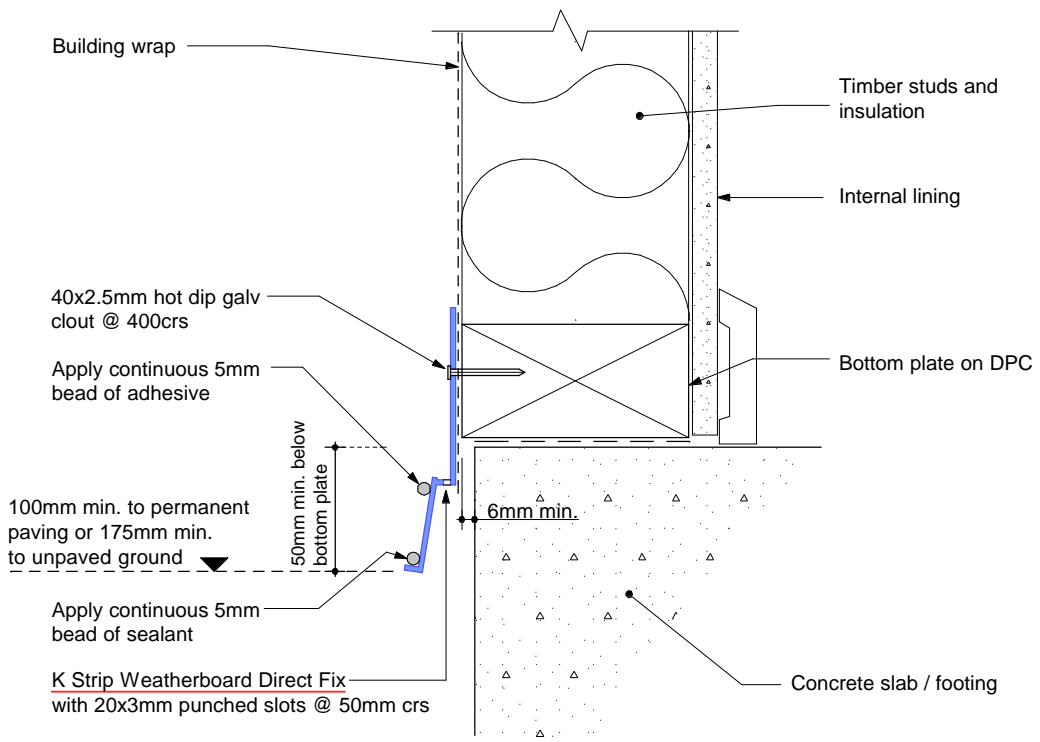



K-STRIP TIMBER OR FIBRE CEMENT WEATHERBOARD DIRECT FIX

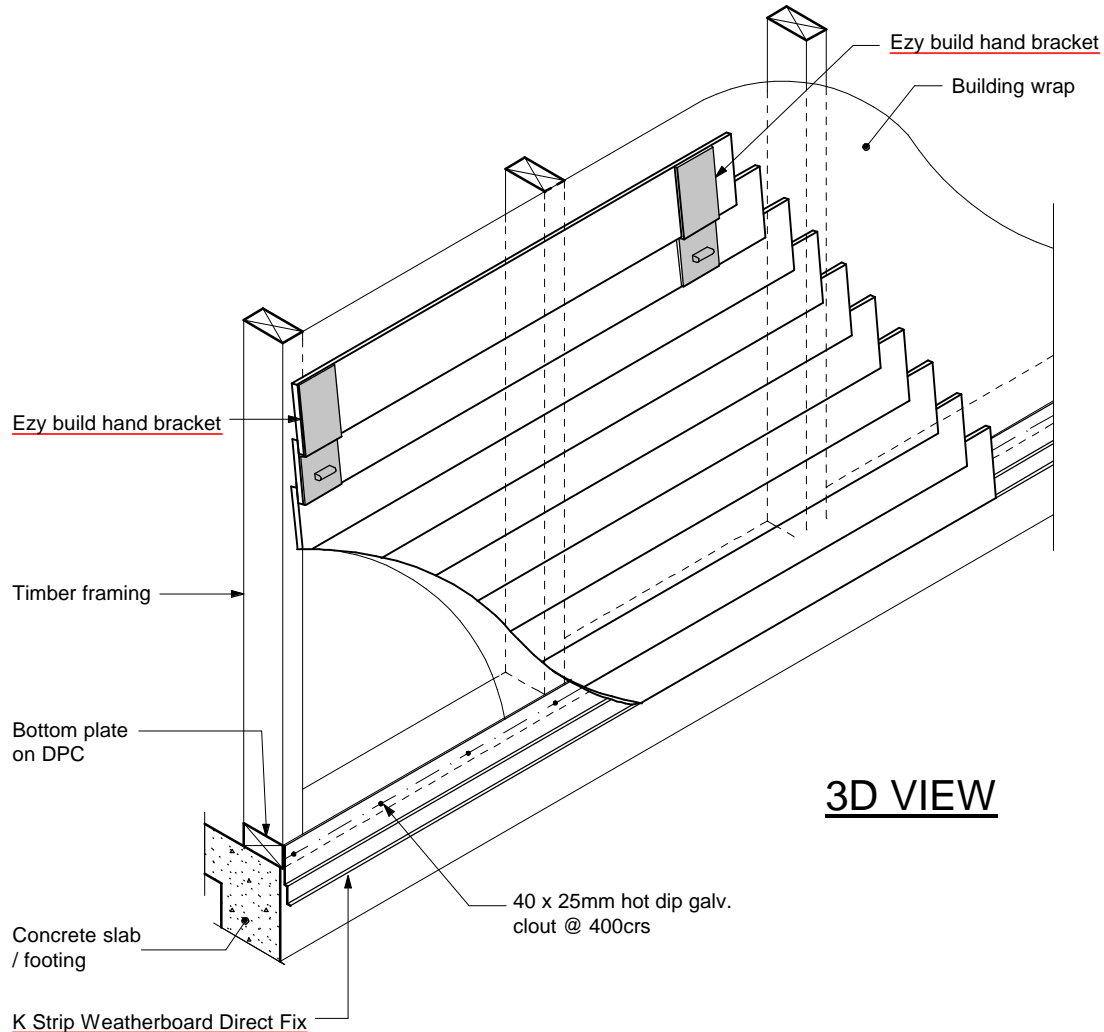

STEP 1 - Fix K-Strip Weatherboard Direct Fix - Apply glue and sealant

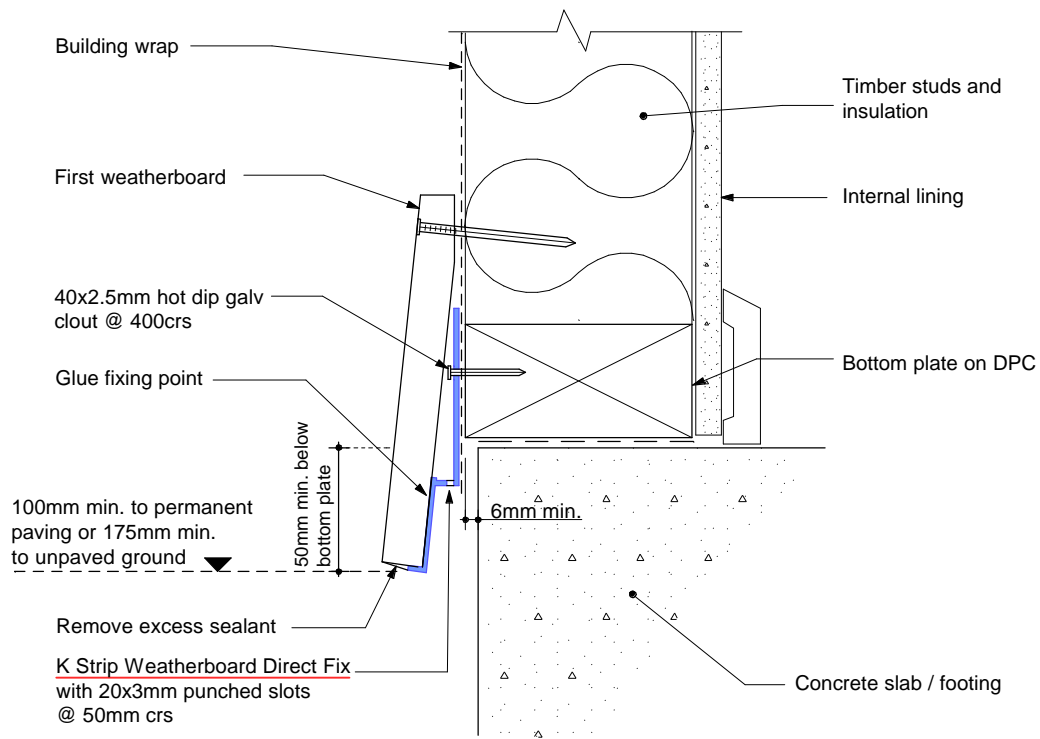

STEP 2 - Fix first weatherboard
- Remove excess sealant

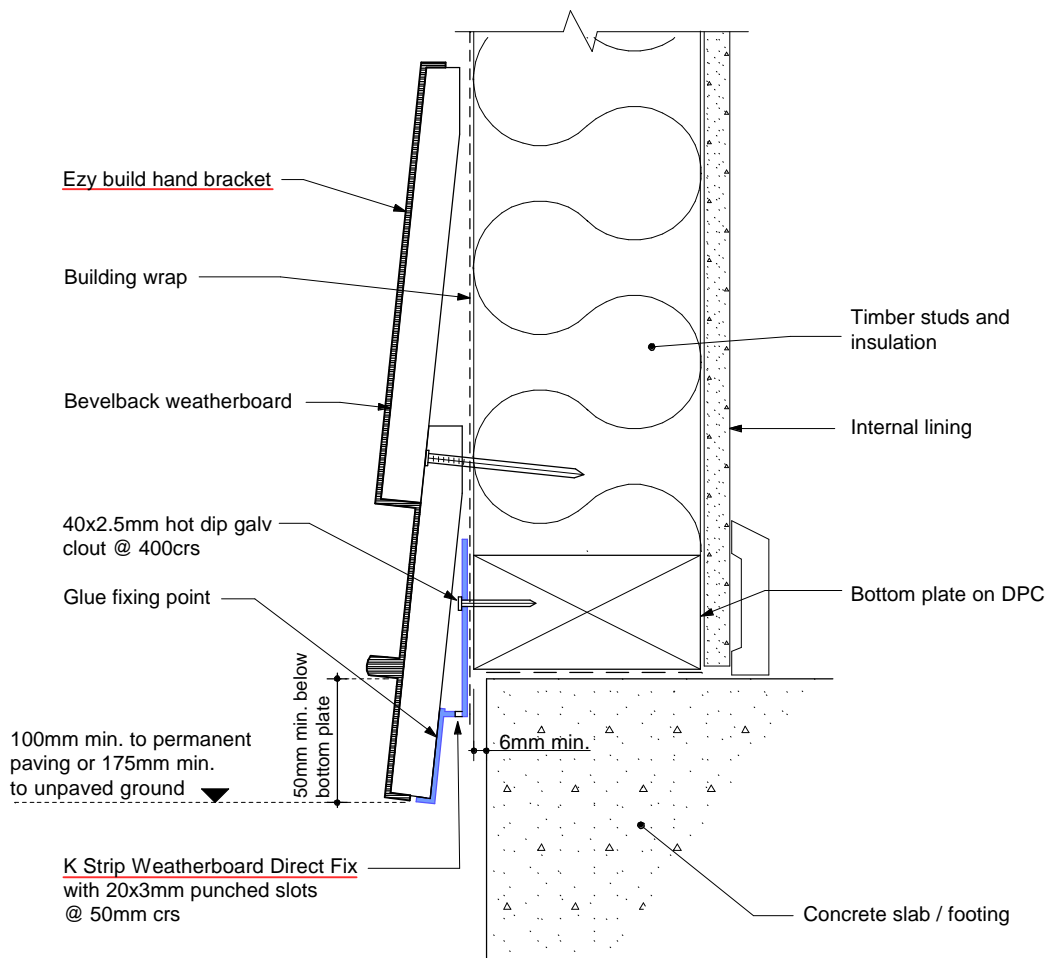

STEP 3 - Use hand bracket to fit remaining weatherboards